


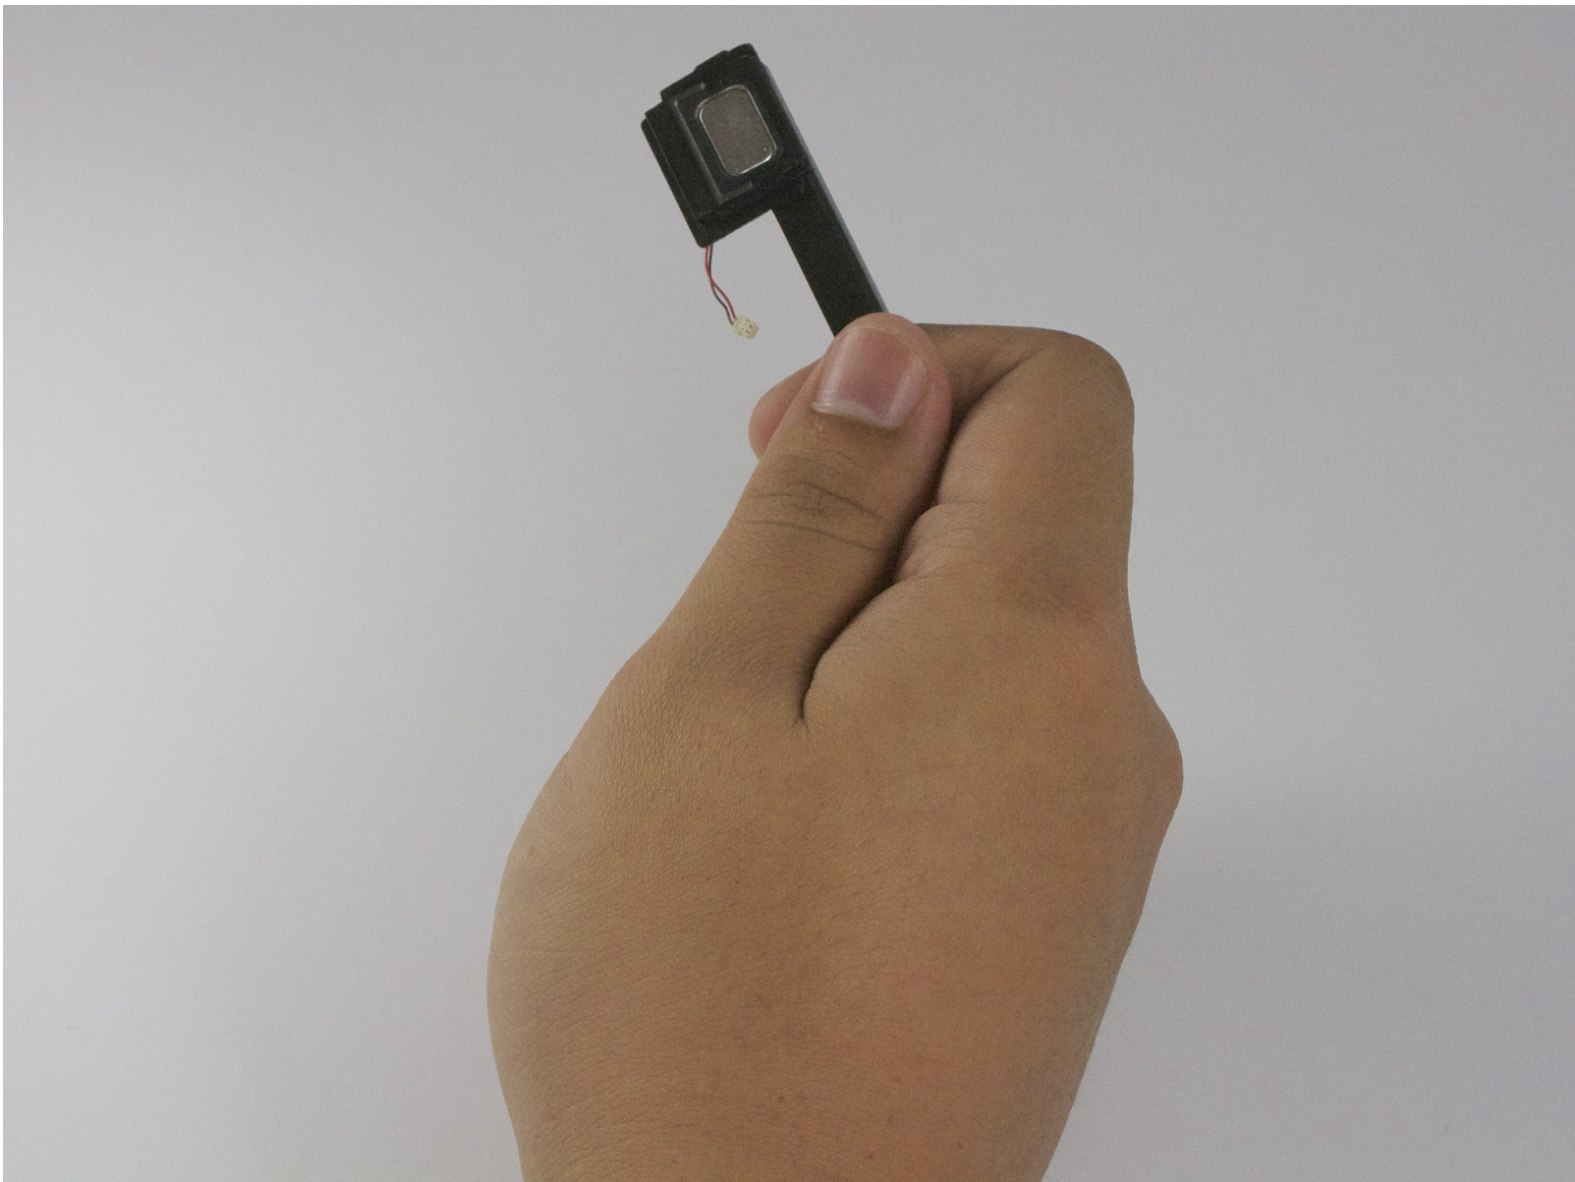

Acer Iconia A110 Speaker Replacement

The removal of the speaker is a moderately easy process.

Written By: Andrea



INTRODUCTION



This guide will lead you step by step on how to remove the speaker.





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

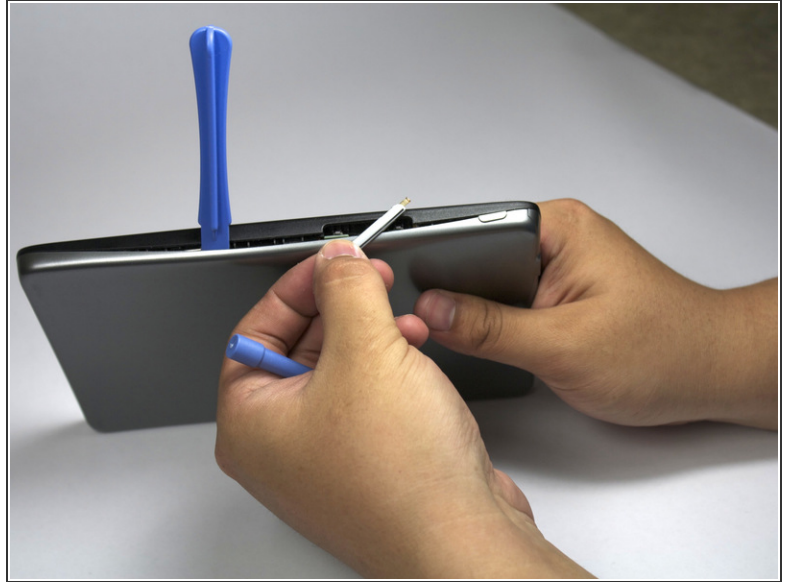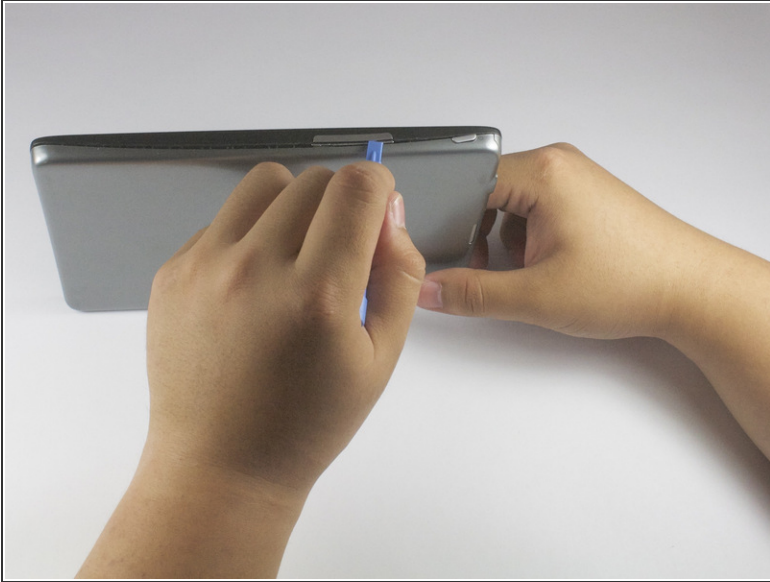
Step 1 — Battery



 Before taking apart your tablet, make sure the device is powered off.


- Pry open the right side of case with the plastic opening tool. If necessary, keep a tool lodged into the side to keep the case from closing.
-  During this process, the volume button and/or power button may fall out.

Step 2

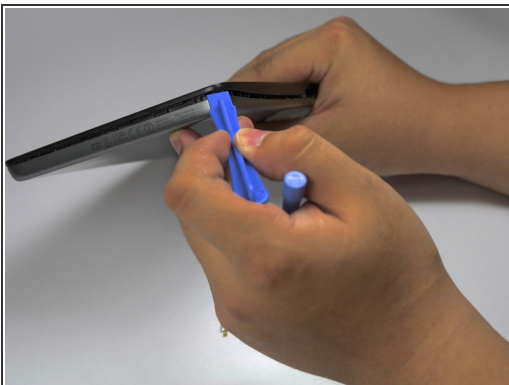


- Pry open the left side of the case with a plastic opening tool. The backside of the tablet should now separate completely from the front.

Step 3

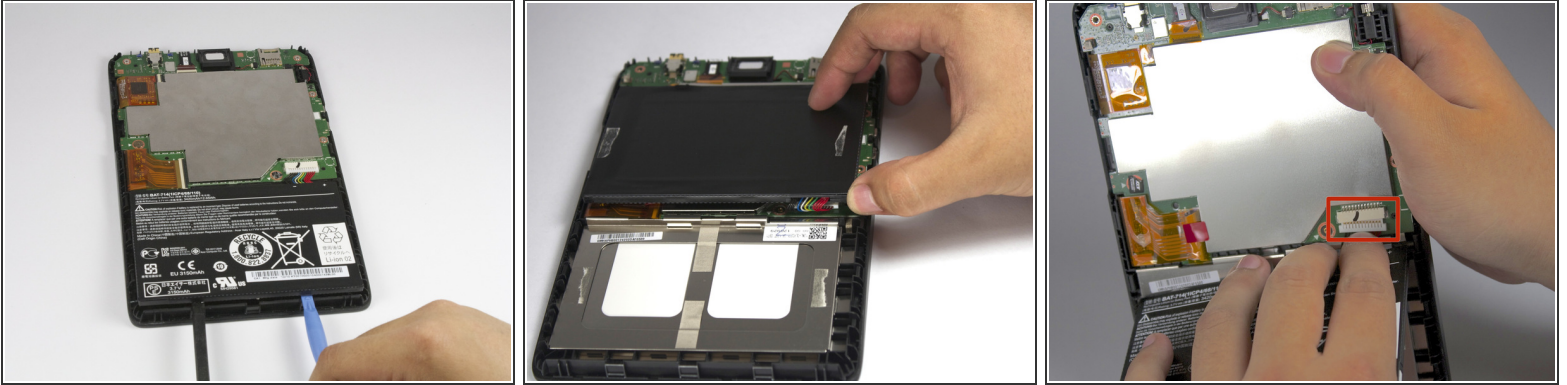



- Using the plastic opening tool and spudger, carefully pry up the battery from the case.
- ⓘ You should hear the adhesive ripping as you do this.
- Once the battery is no longer adhered to the case, detach the dongle that connects the battery to the motherboard.

Step 4 — Speaker

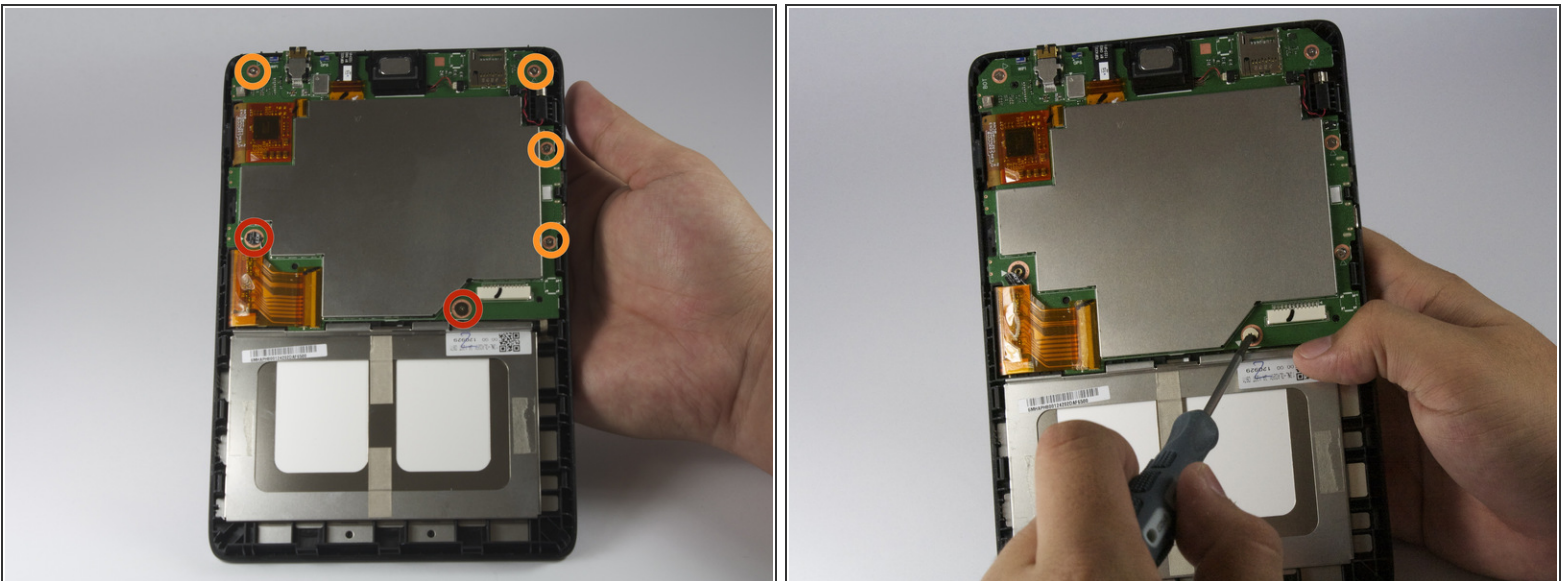



- With the Phillips #00 screwdriver, remove the following screws securing the motherboard to the back panel:
 - Two 2.0 mm screws (with the bigger head)
 - Four 2.5 mm screws (with the smaller head)

Step 5

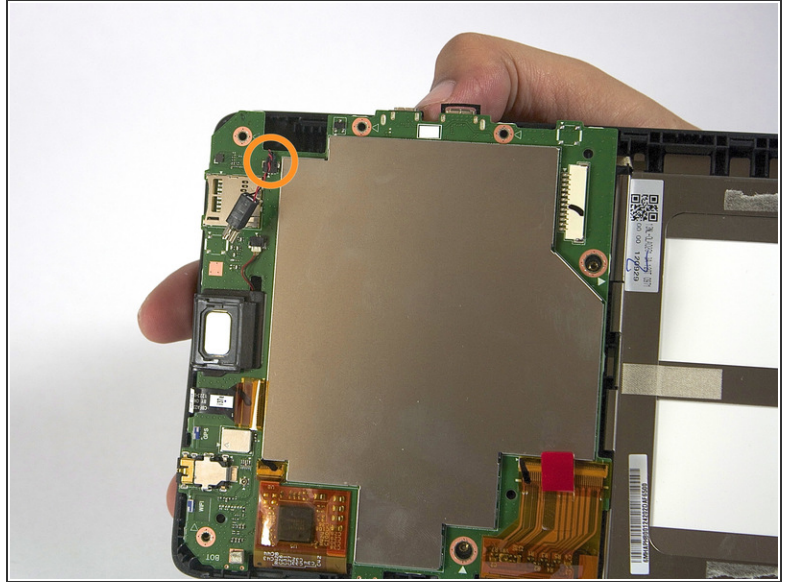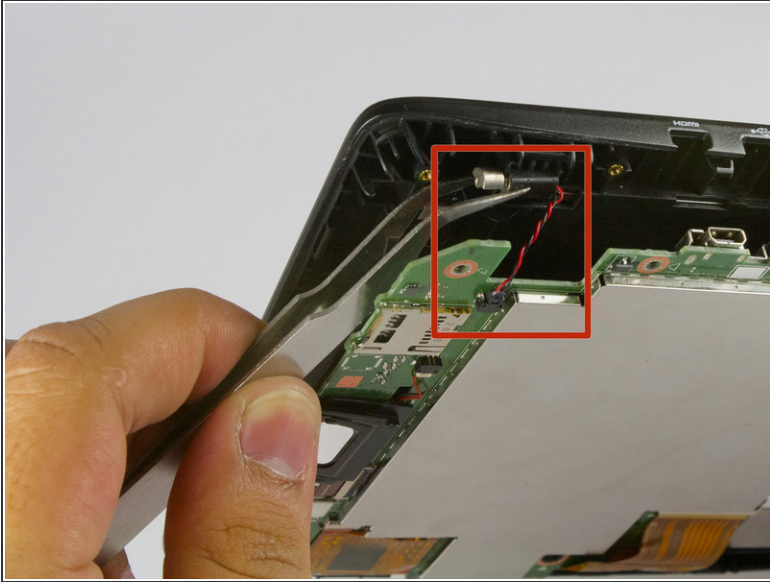

- On the top right side of the motherboard, is the vibration motor. With tweezers, carefully pull the vibration motor out from underneath the motherboard.
- ⚠ The vibration motor is still connected to the motherboard by a small wire connection, so be careful not to rip the wire out.
- With your fingers, carefully disconnect the cable securing the vibration motor to the motherboard. Set aside.

Step 6

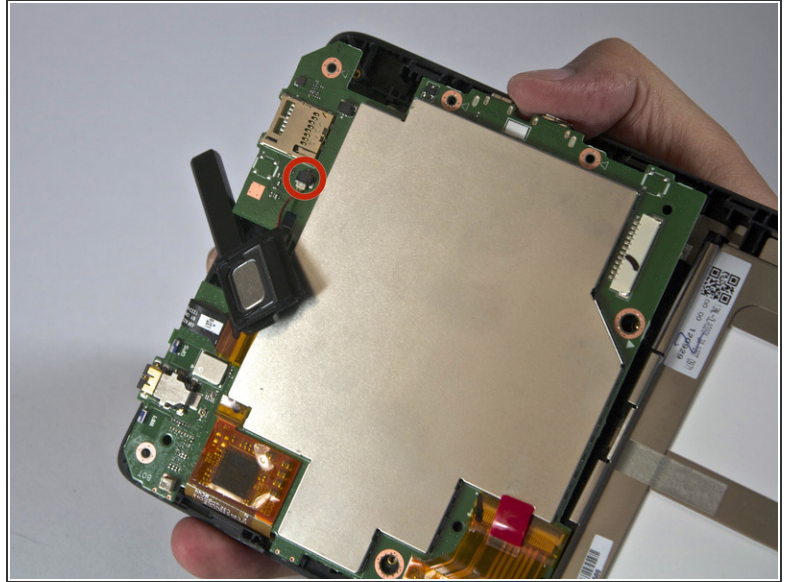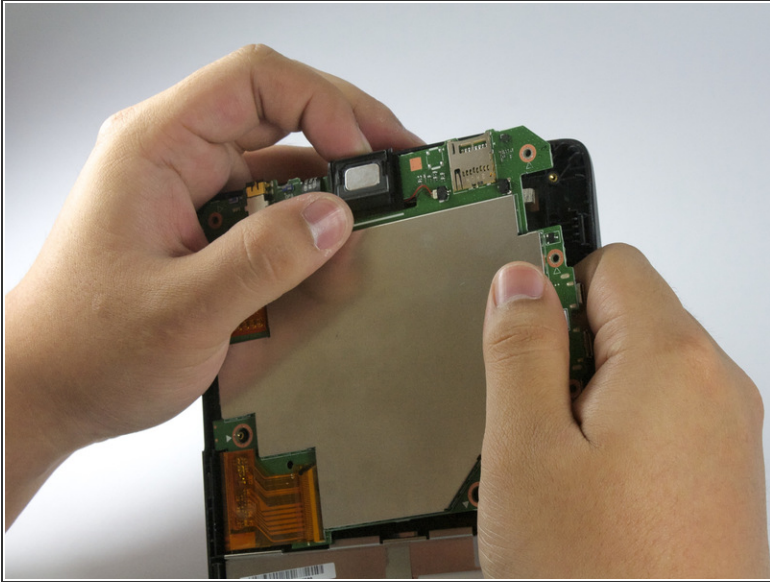

- The speaker located on the top of the motherboard should easily slide out. Take note that there is still a wire connected, so do so carefully.
- With your fingers, slowly pull out the wire connecting the speaker to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 08:54:39 AM.